Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

Model # 977012-COIN · Coin Operated Asphalt Release Airless Foamer

REQUIREMENTS	
Chemical Concentrate	
Water	
Temperature	up to 160°F
Pressure	35 to 125 PSI
Flow	1.30 GPM @ 40 PSI
Supply Line	1/2"
Hose	1/2" ID x 25'
Nozzle	A-25 Airless Foam Wand
Electric	120V
OPTIONS	

OPTIONS

(EPDM)

Stainless Steel Hose Racks			
Small Stainless Steel Hose Rack	# 224145		
Drum & Tote Stick Lengths & Seal Materials			
Drum Stick, 33" (Viton or EPDM)	# 491643 / 491643-E		
Drum Stick, 48" (Viton or EPDM)	# 491648 / 491648-E		
Drum Stick, 54" (Viton or EPDM)	# 491645 / 491645-E		
Tote Stick, 33" (Viton or EPDM)	# 491653 / 491653-E		
Tote Stick, 48" (Viton or EPDM)	# 491654 / 491654-E		
Tote Stick, 54" (Viton or EPDM)	# 491656 / 491656-E		
Stainless Steel Airless Foam Wand			
Wand, SS, Airless Foam, A-25SS # 536625			
Alternate Chemical Check Valve - Viton Standard			

491401

Check Valve, Chemical, PP(W), 1/4"





www.laffertyequipment.com 501-851-2820

WARNING! READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

OVERVIEW

The Coin Operated Asphalt Release Airless Foamer is a time-delayed, medium volume foam applicator for applying asphalt release chemicals on to truck beds or tools to prevent asphalt from sticking. This unit features an adjustable dual-function timer which controls the length of application and the delay time which keeps the driver from immediately restarting the system, preventing costly over-application. The system is activated when the user inserts a coin (100 included). This venturi injection system uses standard city water pressure (35 - 125 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution using precision metering tips. The solution is then projected through the discharge hose and wand to the "airless" foam wand which draws in atmospheric air to create and project wet, clinging foam.

SAFETY & OPERATIONAL PRECAUTIONS

- When connecting to a potable water supply follow all local codes for backflow prevention.
- See Additional Safety Precautions included with the Electrical Control Box Installation Information
- Always consider electrical shock hazard when working with and handling electrical equipment. If uncertain, consult an Electrician. Electrical wiring should only be done by a qualified Electrician.
- For proper performance do NOT modify, substitute nozzle, hose diameter or electrical control box.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and eye wear when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- Follow the chemical manufacturer's safe handling instructions.
- NEVER mix chemicals without first consulting chemical manufacturer.
- Disconnect electrical power to the control box prior to opening it.
- If the control box is connected to compressed air, the compressed air pressure should be kept to a maximum of 90 PSI.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

If you are connecting to a potable water supply follow all local codes for backflow prevention.

- 1. Do NOT connect to electricity yet.
- 2. Mount the unit to a suitable surface above the chemical supply to prevent siphoning.
- 3. Connect the discharge hose(s) as shown in the diagram.
- 4. Flush any new plumbing of debris before connecting water.
- 5. Connect water supply. If water piping is older, or has known contaminants, install a water filter.

Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. DO NOT OVER-TIGHTEN.
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

SETTING THE TIMER

 Make sure the system is not plugged in to a power source. Remove control box cover. The box contains a single RUN timer.

Run Timer: This timer allows you to set the length of time you want the unit to run each time the operator inserts a coin. Set the timer by completely pushing down the combination of dip switches that will equal the total number of seconds run time that you require. (Up to 17 minutes)

Coin Override Note: The lockable control box includes a toggle switch which can be used to bypass the coin acceptor. If toggle switch is set to ON, the unit is then activated by pushing the button located on the cover of the control box. (i.e. If the facility runs out of coins and must continue using equipment.)

- 2. Replace the control box cover.
- 3. Plug the power cord into a 120 VAC power outlet. GFI recommended.
- 4. Turn on your air and/or water supply.
- 5. Insert a coin to activate the timer and make any last adjustments needed.
- 6. The unit is ready for operation.

TO OPERATE

- 1. With the wand in hand insert coin into coin acceptor.
- 2. Open the discharge ball valve and begin application.
- 3. Make final metering tip adjustments based on results.
- 4. The run timer will activate the unit for the preset time and time out.
- 5. Insert another coin to reactivate the unit.

METERING TIP SELECTION				
METERING TIP COLOR	OZ/MIN	DILUTION RATIO @ 40 PSI		
Brown	0.56	297:1		
Clear	0.88	189:1		
Bright Purple	1.38	121:1		
White	2.15	77:1		
Pink	2.93	57:1		
Corn Yellow	3.84	43:1		
Dark Green	4.88	34:1		
Orange	5.77	29:1		
Gray	6.01	28:1		
Light Green	7.01	24:1		
Med. Green	8.06	21:1		
Clear Pink	9.43	18:1		
Yellow Green	11.50	14:1		
Burgundy	11.93	14:1		
Pale Pink	13.87	12:1		
Light Blue	15.14	11:1		
Dark Purple	17.88	9:1		
Navy Blue	25.36	7:1		
Clear Aqua	28.60	6:1		
Black	50.00	_		
No Tip Ratio Up To: 5:1				


The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

FORMULA

GPM × 128 ÷ Desired Dilution Ratio = oz/min

- See Unit Flow Rates chart for GPM
- Use 20 for 20:1 dilution ratio, 30 for 30:1, etc.
- Match calculated ounces per minute (oz/min) to nearest oz/min in Metering Tip Selection chart.

UNIT FLOW RATES		
PSI	GPM	
35	1.22	
40	1.30	
50	1.45	
60	1.59	
70	1.72	
80	1.84	
90	1.95	
100	2.06	
110	2.16	
120	2.25	
125	2.30	
1		

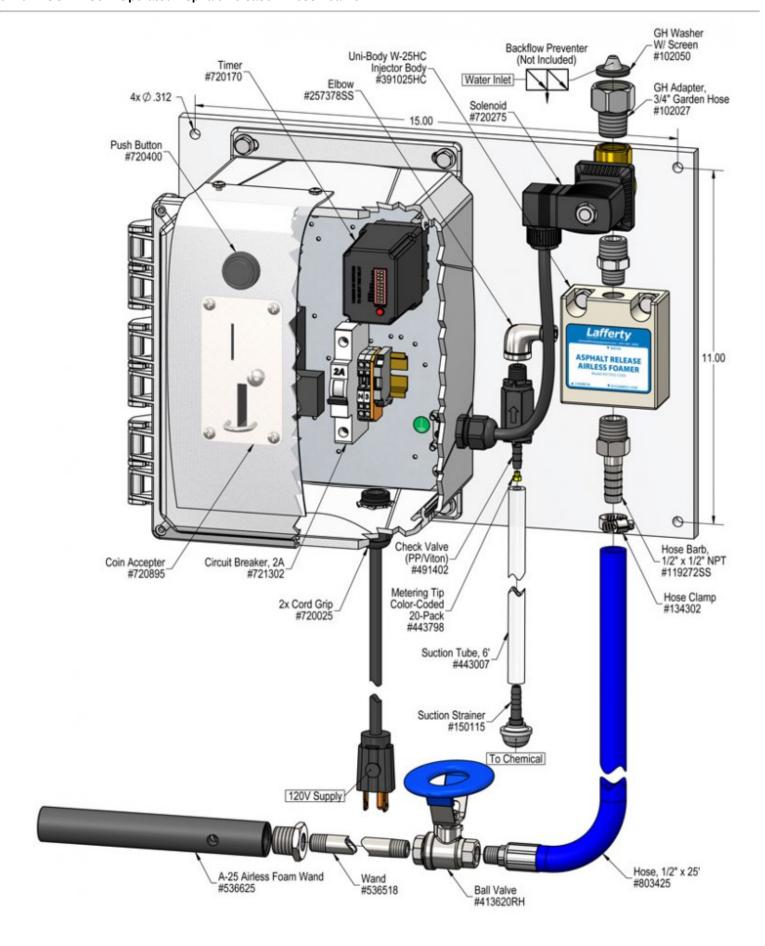

Troubleshooting Guide

Problem	Possible Cause / Solution		
	Startup	Maintenance	
A) Unit will not draw chemical (poor foam quality)	1,4,5,6,7	11,12,13,14,15,16	
B) Asphalt sticking	2,4	11,12,13,14,15,16	
C) Dilution too strong	3		
D) Water backing up into chemical container		11	
E) Unit doesn't come on when when coin is inserted.	8,9,10	18	
F) Unit comes on but no water through the solenoid	1,5,8	10,15,17	

Possible Cause / Solution			
Startup	Maintenance		
1. Water ball valve not completely openCompletely open water ball valve.	11. Chemical check valve stuck or failed ∘ Clean or replace.		
2. Not enough chemical - metering tip too smallo Install larger metering tip.	12. Chemical strainer or metering tip partially blocked ∘ Clean or replace chemical strainer and/or metering tip.		
3. No metering tip installed or metering tip too large • Install smaller metering tip.	13. Chemical tube stretched out or pin hole/cut in chemical tube		
4. Chemical tube not immersed in chemical or chemical depleted • Immerse tube or replenish.	 Cut off end of tube or replace tube. 14. Vacuum leak in chemical pick-up connections Tighten the connection. 		
 5. Discharge hose kinked or discharge ball valve no all the way open Straighten the hose/open ball valve completely 	15. Water strainer clogged or missing/injector inlet orifice clogged • Clean or replace strainer; check/clean inlet orifice for		
6. Wrong Nozzle/Wand ∘ See requirements	obstructions. DO NOT DRILL OUT. 16. Hard water scale or chemical build-up may have formed in		
7. Water pressure or water volume too low/inlet piping too small causing poor chemical pick up • Increase water pressure or water volume	the injector body causing poor or no chemical pick-up • Follow Preventive Maintenance instructions below, using hot water and/or de-scaling acid. When there draw at all, carefully remove fittings and soak entire injector body in de-scaling acid.		
8. No water to the unit • Ensure water supply is not shut off to the unit	17. Water solenoid clogged or failed		
 9. Timer failed, not set properly or malfunctioned Replace timer. Set timer again, ensure the dip switches are depressed completely. 	 Clean or replace the water solenoid 18. Coin Acceptor failed or a coin jammed. Replace acceptor or remove coin 		
 10. May have electrical problems Have a qualified electrician check electrical connections. Ensure circuit breaker (5 Amp) has not been tripped. 			

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

