Lafferty Equipment Manufacturing, LLC
Installation & Operation Instructions

Model # 925737 · 37.4 Gallon Internal Tank Sprayer

REQUIREMENTS

Ready-to-Use Chemical Solution

Compressed Air	up to 3 CFM
Minimum Air Supply Line	3/8"
Hose	1/2" ID x 50'
Nozzle	2503 or 2506

OPTIONS

Stainless Steel Hose Racks	
Large Stainless Steel Hose Rack	# 224150
Proportioning / Filling Options	
1-Way Ball Valve Mixing Station (4 GPM)	# 985100
1-Way Push Lever Mixing Station (4 GPM)	# 981100
High Volume Mixing Station (9.9 GPM)	# 985835
Alternate Check Valves & Seals (EPDM Standard)	
Check Valve, Air, SS, 1/4" MM (Viton / Hast)	# 491306
O-Ring, Viton, Tank Lid, 5, 16 & 37 Gallon, ASME	# 708513

WEIGHT & DIMENSIONS

Single Package	
Shipping Weight	201 lbs.
Shipping Dimensions	48" x 40" x 54"

Ships on a pallet



Lafferty EQUIPMENT MANUFACTURING LLC

CFS TECHNOLOGIES

www.laffertyequipment.com
501-851-2820

WARNING! READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

OVERVIEW

The 37.4 Gallon Internal Tank Sprayer is a chemical spray applicator with an all stainless steel cart assembly for applying ready-to-use chemical solutions to a variety of surfaces. Connect compressed air to pressurize the 316L stainless steel ASME rated tank and project the solution through the hose, wand and fan pattern spray nozzle. Includes 2 spray nozzles which provide either 51 or 110 minutes of spraying time depending on the nozzle used.

SAFETY & OPERATIONAL PRECAUTIONS

- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and eye wear when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- Carefully follow chemical manufacturer's safe handling instructions and recommended precautions/practices especially when using flammable chemicals.
- MAXIMUM PRESSURE for air regulator IS 73 PSI. Pop-off valve is set for 75 PSI.

Do Not Use any chemicals that are not compatible with 316L stainless steel, each other or that could off gas. Including hydrochloric (muriatic) acid, hydrofluoric acid, aluminum brighteners, or paint strippers.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

- This unit has been preset and tested. Use as is before making any adjustments.
- The air regulator controls the tank pressure and is preset at 60 PSI. This is the optimal pressure.MAXIMUM PRESSURE IS 73 PSI. Pop-off valve is set for 75 PSI.
- Tank pressure can be changed by adjusting this air regulator. Clockwise for more pressure, counter-clockwise for less.
- Two spray nozzles are provided to control the volume of spray. Try both to see which one is best for your application..

TO PREPARE TO OPERATE

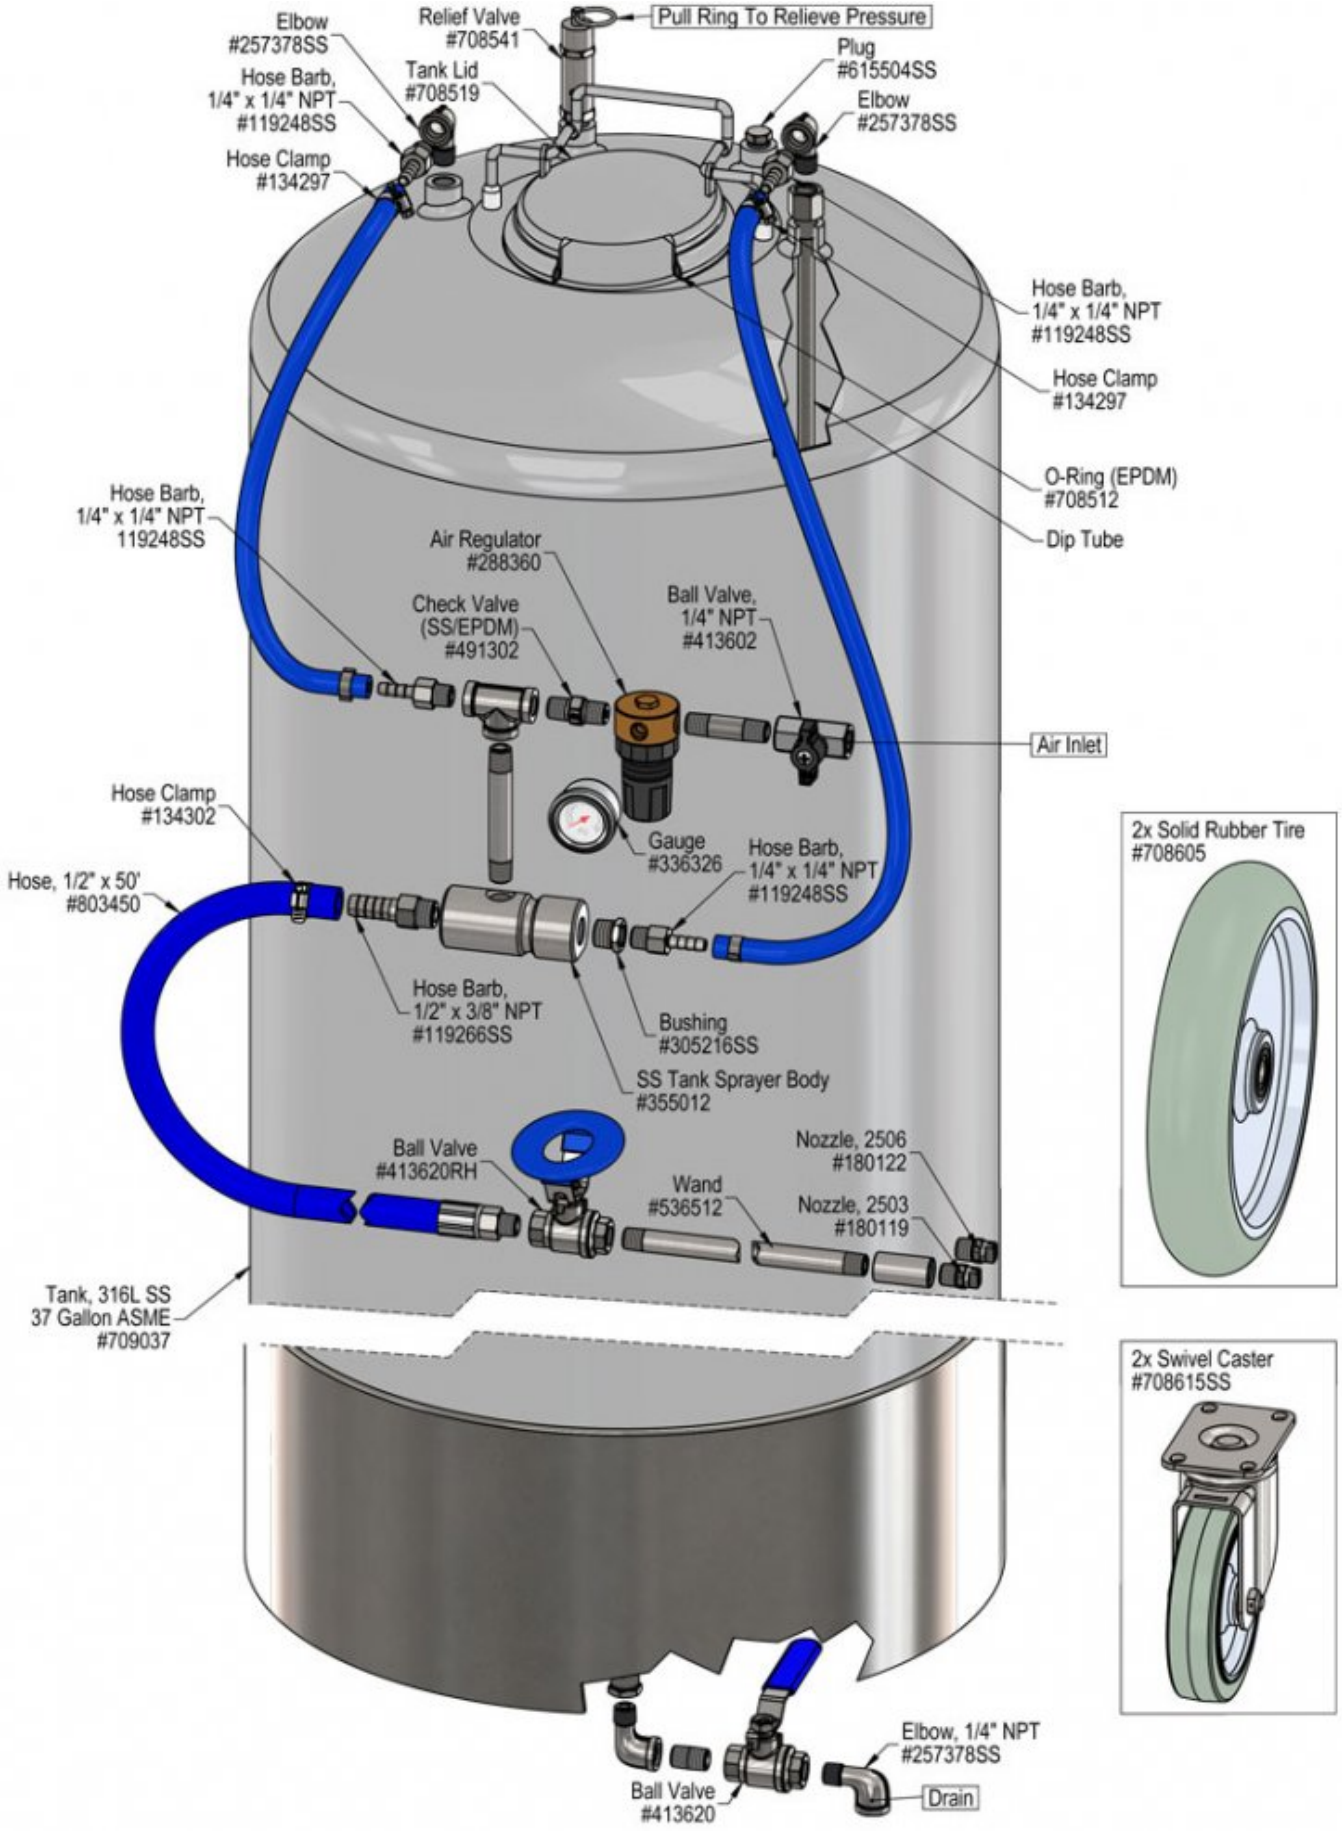
1. Always pull up on the pop-off valve to check for and relieve pressure in the tank before trying to remove the lid!
2. Pull wire handle up to unlock the tank lid. Then remove the lid from the tank, making sure the "O" ring remains attached to the lid. Fill tank with chemical solution.
3. Replace the tank lid, making sure the "O" ring seats properly. Lock wire handle in place.
4. Make sure the discharge ball valve is closed.
5. Make sure the air ball valve is closed. Connect a compressed air line (3/8" I.D. minimum) to the inlet ball valve.

TO OPERATE

1. Open the air ball valve. Allow time for pressure to build up.
2. While firmly holding the wand, *point the discharge away from yourself and others*. Then, open the discharge ball valve and begin application.
3. When application is completed, close the discharge ball valve. Return to the unit and close the air ball valve.
4. Rinse before the spray dries.

TO SHUT DOWN OR REFILL TANK

1. Turn off the air supply by closing the air ball valve.
2. Pull up the ring on the pop-off pressure relief valve and/or open the discharge ball valve to relieve pressure completely.
3. Refill the tank, when necessary, with chemical solution from optional Mixing Station, using the procedure in "TO PREPARE TO OPERATE" steps 1 - 4.


Elbow
#257378SS
Relief Valve
#708541
Pull Ring To Relieve Pressure
Plug
#615504SS
Hose Barb,
1/4" x 1/4" NPT
#119248SS
Tank Lid
#708519
Elbow
#257378SS
Hose Clamp
#134297
Hose Barb,
1/4" x 1/4" NPT
#119248SS
Hose Clamp
#134297
O-Ring (EPDM)
#708512
Dip Tube
Hose Barb,
1/4" x 1/4" NPT
119248SS
Air Regulator
#288360
Check Valve
(SS/EPDM)
#491302
Ball Valve,
1/4" NPT
#413602
Air Inlet
Hose Clamp
#134302
Gauge
#336326
Hose Barb,
1/4" x 1/4" NPT
#119248SS
Hose, 1/2" x 50'
#803450
Hose Barb,
1/2" x 3/8" NPT
#119266SS
Bushing
#305216SS
SS Tank Sprayer Body
#355012
Ball Valve
#413620RH
Nozzle, 2506
#180122
Wand
#536512
Nozzle, 2503
#180119
Tank, 316L SS
37 Gallon ASME
#709037
Elbow, 1/4" NPT
#257378SS
Ball Valve
#413620
Drain
2x Solid Rubber Tire
#708605
2x Swivel Caster
#708615SS

Troubleshooting Guide

Problem	Possible Cause / Solution	
	Startup	Maintenance
A) Weak or no spray coming out	1, 3, 4, 6	5, 7, 8
B) Pop-off valve going off continuously	2	
C) Cleaning / application results not acceptable	2	9

Possible Cause / Solution

Startup

1. **Air adjustment too low**
   - Open air ball valve fully. Adjust air regulator clockwise to a maximum of 70 PSI.
2. **Air pressure too high.**
   - Adjust the air regulator to a maximum of 70 PSI.
3. **Lid o-ring not sealing properly**
   - Relieve pressure and re-seat o-ring
4. **Chemical concentration too weak**
   - Increase chemical concentration

Maintenance

5. **Air regulator clogged or failed**
   - Clean or replace air regulator.
6. **Air check valve clogged or failed**
   - Clean or replace the air check valve.
7. **Pop-Off Valve clogged or failed**
   - Clean or replace
8. **Tank is empty (no solution)**
   - Follow refill tank procedure.
9. **Tank o-ring not seated, missing or worn**
   - Realign, clean or replace
10. **Soil has hardened on surface**
    - Reapplication may be necessary. Always rinse before solution dries.

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.