Lafferty Equipment Manufacturing, LLC
Installation & Operation Instructions

Model # 950601SS · 394 SS Blast Fogger

REQUIREMENTS

Ready-to-Use Chemical Solution

Compressed Air	up to 13 CFM @ 80 PSI
Minimum Air Supply Line	3/8"

OPTIONS

Stainless Steel Jug Racks

1 Gallon Round/Square	# 224200
1 Gallon Round/Square Locking	# 224200-L
2 ½ Gallon (8 ½" x 10 ½")	# 224210
5 Gallon Round/Square Locking (12" x 12")	# 224214
5 Gallon Round/Square (12" x 12")	# 224215

To Control Solution Flow (Wetness of Fog)

Metering Tips-Color Coded (Set of 20)	# 443798
Metering Tips-Color Coded (10 Smallest)	# 443794

WEIGHT & DIMENSIONS

Single Package

Shipping Weight	4 lbs.
Shipping Dimensions	33" x 4" x 3"



Lafferty® EQUIPMENT MANUFACTURING LLC

CFS TECHNOLOGIES

www.laffertyequipment.com
501-851-2820

WARNING! READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

OVERVIEW

The 394 SS Blast Fogger is a wet mist sprayer that uses compressed air (13 CFM @ 80 PSI) and venturi action to draw ready-to-use chemical solution from any container and project a strong blast of chemical for quickly wetting small areas. This unique fogger features an extended wand and stainless steel construction for applying solvents.

SAFETY & OPERATIONAL PRECAUTIONS

- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear proper respiratory protection, protective clothing, gloves and eye-wear when working with chemicals.
- Always direct the discharge away from electrical devices.
- Follow the chemical manufacturer's safe handling instructions.
- Carefully follow chemical manufacturer's safe handling instructions and recommended precautions/practices when using flammable chemicals.
- **SPECIAL CAUTION: This fogger atomizes chemical into the air. Ensure that the area to be fogged has been evacuated of all people without proper respiratory protection!**
- **Compressed Air Inlet Pressure should be regulated to a maximum of 90 PSI.**

HAND HELD 394 1-WAY FOGGER

DELIVERS A STRONG BLAST OF CHEMICAL

COMPRESSED AIR FLOW (CFM)		
PLUMES	**60 PSI**	**80 PSI**
1-Way	10.0	13.0
CHEMICAL SOLUTION DRAW RATE (FL-OZ/MIN)		
DISTANCE	**60 PSI**	**80 PSI**
Hand Held	32.4	32.0

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

Hand Held

1. Mix up a ready to use chemical solution.
2. Connect a compressed airline to the fogger.
3. Place the pick up tube W/ strainer in the solution.

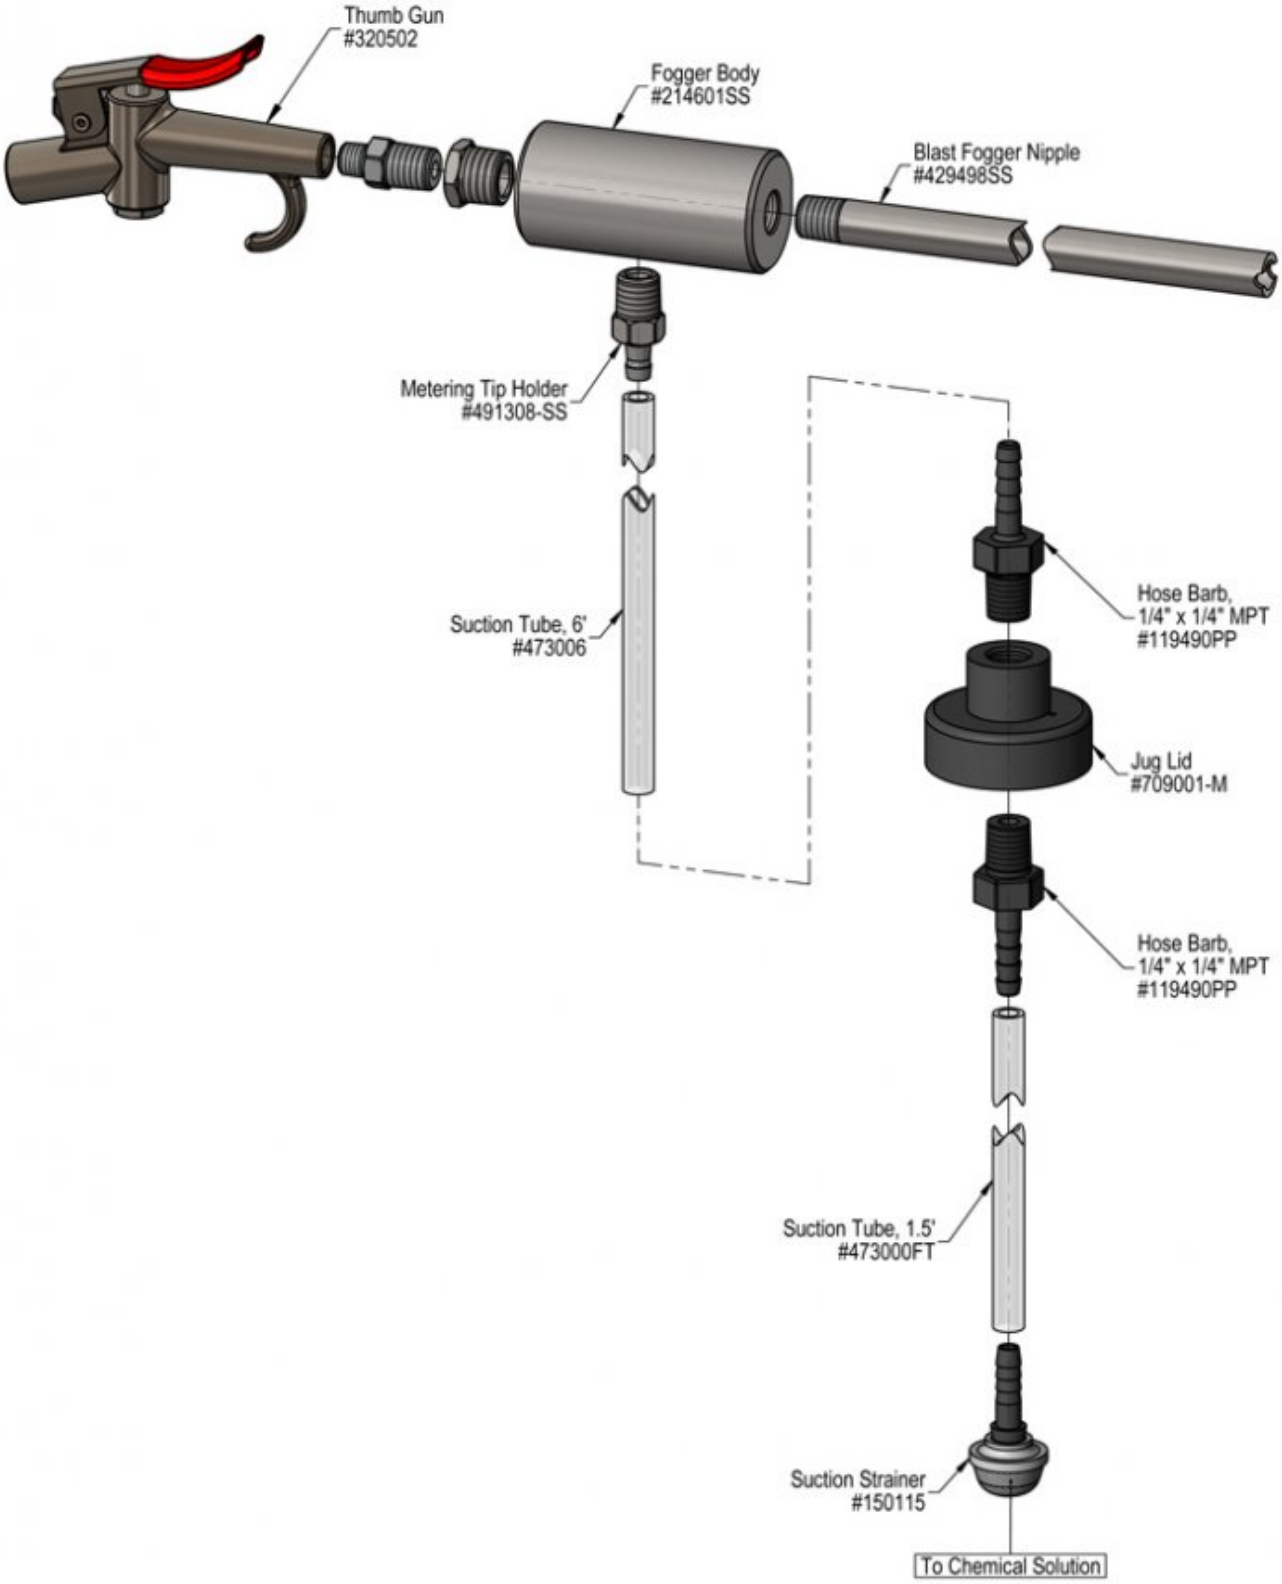
TO OPERATE

SPECIAL CAUTION: This fogger atomizes chemical into the air. Ensure that the area to be fogged has been evacuated of all people without proper respiratory protection! Upon completion of fogging, ensure that sufficient time has elapsed for all the fog to have dissipated before returning to the area without proper respiratory protection.

Hand Held

1. Direct fogger towards the area or object to be fogged and turn the ball valve on / depress thumb gun.
2. When finished close the ball valve / release thumb gun.

Foggers may produce more volume than needed. If fog is too dense, optional metering tips are available for restricting the solution volume to produce a lighter fog.


Thumb Gun
#320502
Fogger Body
#214601SS
Blast Fogger Nipple
#429498SS
Metering Tip Holder
#491308-SS
Suction Tube, 6'
#473006
Hose Barb,
1/4" x 1/4" MPT
#119490PP
Jug Lid
#709001-M
Hose Barb,
1/4" x 1/4" MPT
#119490PP
Suction Tube, 1.5'
#473000FT
Suction Strainer
#150115
To Chemical Solution

Troubleshooting Guide

Problem	Possible Cause / Solution	
	Startup	Maintenance
A) Fogger will not draw chemical or is sputtering	1, 2, 3, 4	6, 7, 8, 9
B) Fog is too wet	1, 5	

Possible Cause / Solution

Startup

1. **Air line too small, not enough air pressure or volume**
   - See REQUIREMENTS, page 1.
2. **Air pressure too high.**
   - Slightly close the air supply valve to lower the pressure by lowering the volume until the fogger smooths out.
3. **Fogger too high to draw chemical, 12' maximum**
   - Raise the level of the chemical
4. **Chemical tube kinked or not immersed in chemical or chemical depleted.**
   - Straighten tube / replenish chemical
5. **Drawing too much solution**
   - Order and install optional metering tip or needle valve (needle valve 4 & 8-Way only).

Maintenance

6. **Pin hole or cut in suction tube**
   - Replace suction tube.
7. **Chemical strainer clogged up**
   - Clean or replace
8. **Metering tip or metering tip holder clogged**
   - Clean or replace metering tip and/or metering tip holder.
9. **Debris clogging the fogger inlet jets**
   - Disconnect air supply, remove fogger bodies and visually inspect; remove debris from fogger inlet.

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.