

# Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

## Model # 917115 · Hyper SS Foamer

### REQUIREMENTS

#### Chemical Concentrate

#### Water

|             |                   |
|-------------|-------------------|
| Temperature | up to 180°F       |
| Pressure    | 400 to 1000 PSI   |
| Flow        | 3.3 GPM @ 700 PSI |
| Supply Line | 3/8"              |

**Compressed Air** up to 5 CFM

**Hose** 3/4" ID x 50'

**Nozzle** 65300

### OPTIONS

#### Stainless Steel Hose Racks

Large Stainless Steel Hose Rack # 224150

#### Stainless Steel Jug Racks

1 Gallon Round/Square # 224200

1 Gallon Round/Square Locking # 224200-L

2 ½ Gallon (8 ½" x 10 ½") # 224210

5 Gallon Round/Square Locking (12" x 12") # 224214

5 Gallon Round/Square (12" x 12") # 224215

#### Safe Flow Lid™ for 1 Gallon Jugs

Lid, Suction Tube, and Strainer # 709101

#### Optional Zero Degree Nozzle (For Increased Range)

Nozzle, NPB, 3/4" - 00400 # 180154

#### Alternate Check Valves - EPDM Standard

Check Valve, Chemical, PP/Viton, 1/4" # 491315

Check Valve, Air, SS/Viton, 1/4" # 491306



[www.laffertyequipment.com](http://www.laffertyequipment.com)  
501-851-2820

**WARNING! READ ALL  
INSTRUCTIONS BEFORE  
USING EQUIPMENT!**

### OVERVIEW

The Hyper SS Foamer is a 3.3 GPM @ 700 PSI foam applicator for quickly projecting foaming chemicals on to any surface up close or at a distance. This stainless steel venturi injection system uses high water pressure (400 - 1000 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution. Rich, clinging foam is created by injecting compressed air into the solution to greatly increase volume and coverage ability. The foam is then projected through the foam hose, wand and fan nozzle at distances up to 13 feet.

## SAFETY &amp; OPERATIONAL PRECAUTIONS

- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and eye wear when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- Follow the chemical manufacturer's safe handling instructions.
- Do not put a discharge ball valve on this unit or kink the hose to stop the flow of foam.

## TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

1. Mount the unit to a suitable surface above the chemical supply to prevent siphoning.
2. Connect the discharge hose.
3. When connecting to a potable water supply follow all local codes for backflow prevention.
4. Connect water supply. To prevent blocking the small water jets in the foamer body, flush any new plumbing of debris before connecting. If water piping is older and has known contaminants, install a filter.
5. Connect air supply. If air line is older and has known contaminants install a filter.

**Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.**

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. **DO NOT OVER-TIGHTEN.**
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

## TO OPERATE

Always make sure the wand is in hand and pointed in a safe direction before turning water and air on. DO NOT kink the hose to stop foam flow, return to the unit and close the water and air ball valves.

1. Final chemical dilution and air adjustments will now have to be made.
2. With wand in hand open the water ball valve, and the air ball valve.
  - Wait a few seconds and observe foam consistency.
  - To adjust the foam consistency turn the needle valve knob slightly counterclockwise for dryer foam and clockwise for wetter foam.
  - Medium wet foam will give the best cleaning results! Very dry foam will NOT clean as well!
  - You may also have to try different sized metering tips and air settings until foam consistency and cleaning results are acceptable. Once this is set you are ready to start application.
3. When foaming is completed return to the unit and close the water and air ball valves. Do NOT kink the hose to stop foam flow. Rinse the work surface before foam dries.

## METERING TIP SELECTION

| METERING TIP COLOR  | OZ/MIN | DILUTION RATIO @ 700 PSI |
|---------------------|--------|--------------------------|
| Brown               | 0.56   | 756:1                    |
| Clear               | 0.88   | 481:1                    |
| Bright Purple       | 1.38   | 307:1                    |
| White               | 2.15   | 197:1                    |
| Pink                | 2.93   | 144:1                    |
| Corn Yellow         | 3.84   | 110:1                    |
| Dark Green          | 4.88   | 87:1                     |
| Orange              | 5.77   | 73:1                     |
| Gray                | 6.01   | 70:1                     |
| Light Green         | 7.01   | 60:1                     |
| Med. Green          | 8.06   | 53:1                     |
| Clear Pink          | 9.43   | 45:1                     |
| Yellow Green        | 11.50  | 37:1                     |
| Burgundy            | 11.93  | 35:1                     |
| Pale Pink           | 13.87  | 31:1                     |
| Light Blue          | 15.14  | 28:1                     |
| Dark Purple         | 17.88  | 24:1                     |
| Navy Blue           | 25.36  | 17:1                     |
| Clear Aqua          | 28.60  | 15:1                     |
| Black               | 50.00  | 8:1                      |
| No Tip Ratio Up To: |        | 8:1                      |

The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.


## FORMULA

**GPM × 128 ÷ Desired Dilution Ratio = oz/min**

- See Unit Flow Rates chart for GPM
- Use 20 for 20:1 dilution ratio, 30 for 30:1, etc.
- Match calculated ounces per minute (oz/min) to nearest oz/min in Metering Tip Selection chart.

## UNIT FLOW RATES

| PSI  | GPM  |
|------|------|
| 400  | 2.50 |
| 500  | 2.80 |
| 600  | 3.06 |
| 700  | 3.31 |
| 800  | 3.54 |
| 900  | 3.75 |
| 1000 | 3.95 |

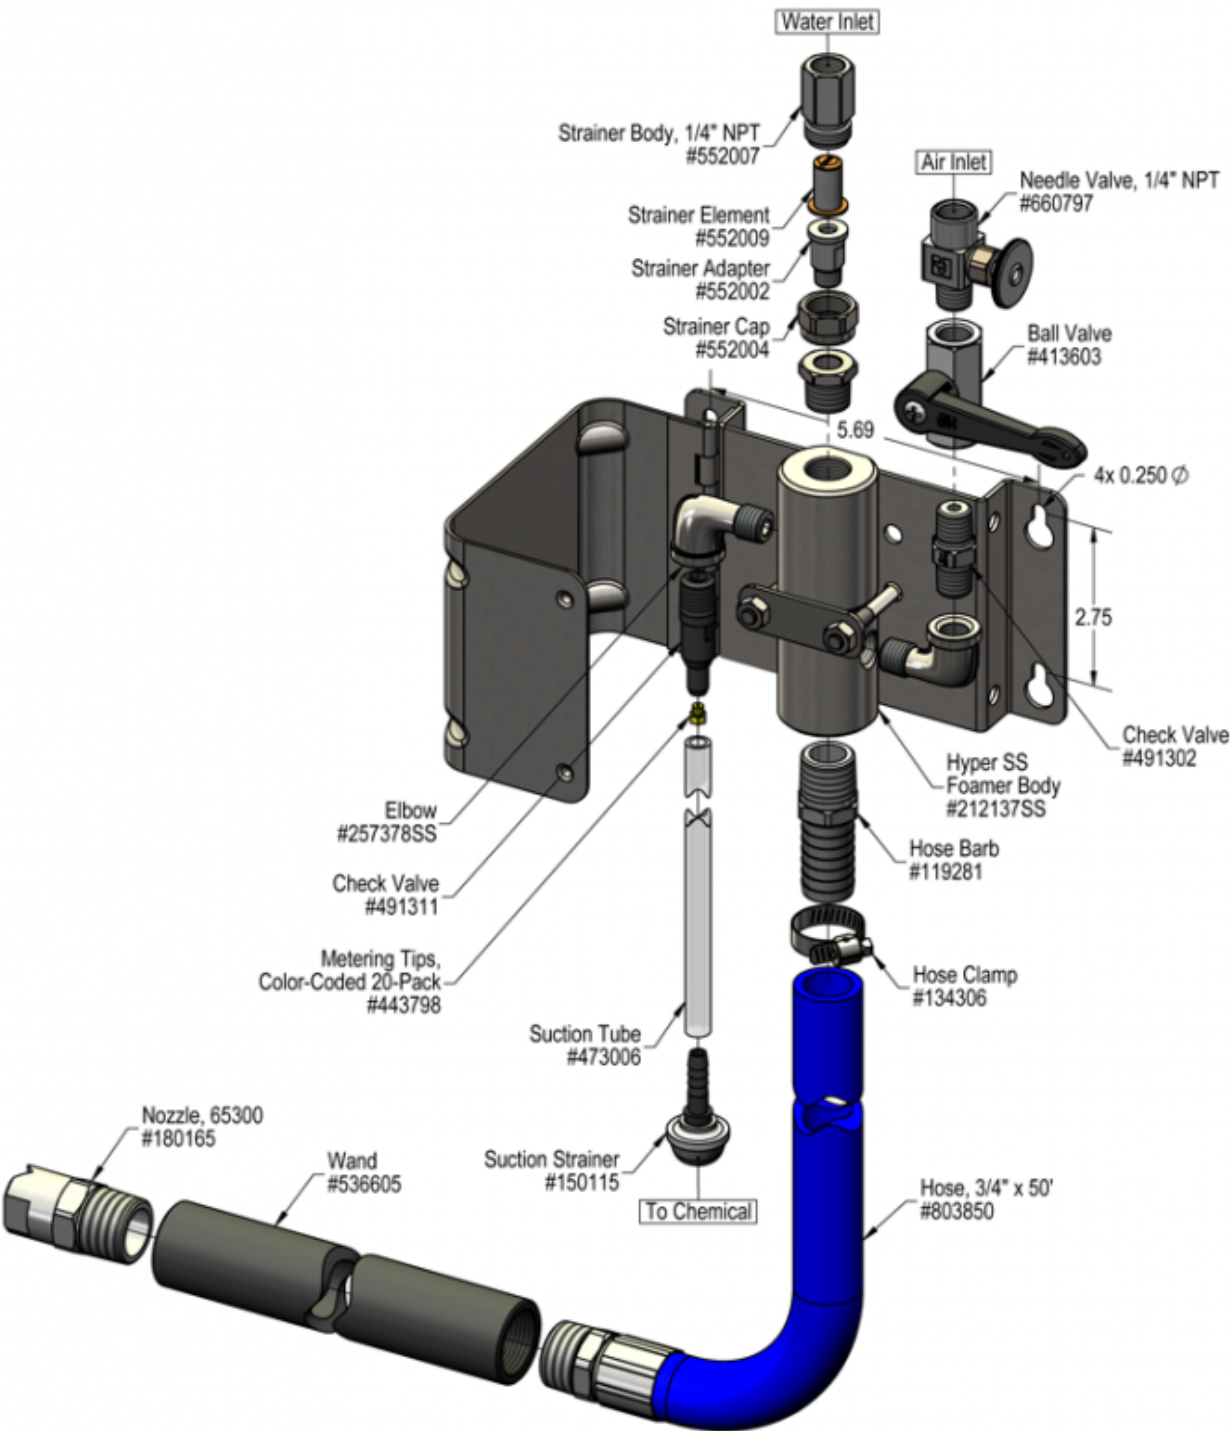

## Troubleshooting Guide

| Problem                                      | Possible Cause / Solution  |                            |
|--|----------------------------|----------------------------|
|  | Startup                    | Maintenance                |
| A) Foam surges and/or hose "bucks".          | 1, 2, 3, 4, 6, 7, 8, 9, 10 | 12, 13, 14, 15, 16, 18, 19 |
| B) Foamer will not draw chemical.            | 1, 3, 4, 7, 8, 9, 10       | 12, 13, 14, 15, 16, 18, 19 |
| C) Foam too wet.                             | 2, 3, 4, 6, 7, 8, 9, 10    | 13, 14, 15, 16, 18, 19     |
| D) Foam does not clean properly (too dry).   | 1, 4, 6, 11                |                            |
| E) Using too much chemical.                  | 5                          |                            |
| F) Water/chemical backing up into air line.  |                            | 17                         |
| G) Water backing up into chemical container. |                            | 12                         |

| Possible Cause / Solution  |  |
|--|--|
| Startup  | Maintenance  |
| <b>1. Air volume too high</b><br>◦ Adjust the needle valve slowly clockwise.   | <b>12. Chemical check valve stuck or failed</b><br>◦ Clean or replace.   |
| <b>2. Use of an oiler in the airline will cause poor foam quality</b><br>◦ Use only clean, dry air.  | <b>13. Chemical strainer or metering tip partially blocked</b><br>◦ Clean or replace chemical strainer and/or metering tip.  |
| <b>3. Inlet ball valve not completely open</b><br>◦ Completely open the ball valve.  | <b>14. Chemical tube stretched out or pin hole/cut in tube</b><br>◦ Cut off end of tube or replace tube.   |
| <b>4. Not enough chemical - metering tip too small</b><br>◦ Install larger metering tip.<br>◦ Chemical Ball valves closed (2-Way)                    | <b>15. Vacuum leak in chemical pick-up connections</b><br>◦ Tighten the connection.  |
| <b>5. No metering tip installed or metering tip too large</b><br>◦ Install smaller metering tip.   | <b>16. Needle valve clogged not allowing enough air</b><br>◦ Clean or replace.   |
| <b>6. Improper chemical</b><br>◦ Ensure product is recommended for the application.  | <b>17. Air check valve failed</b><br>◦ Replace.  |
| <b>7. Chemical tube not immersed or chemical depleted</b><br>◦ Immerse tube or replenish.  | <b>18. Water strainer element clogged or missing/foamer inlet orifice clogged</b><br>◦ Clean or replace strainer element; check/clean inlet orifice for obstructions. DO NOT DRILL OUT.  |
| <b>8. Discharge hose too long or wrong size or kinked</b><br>◦ Straighten the hose or replace with correct hose.                                     | <b>19. Chemical build-up may have formed in the foamer body causing poor or no chemical pick-up</b><br>◦ Follow Preventive Maintenance instructions below, using hot water and/or descaling acid. When there is no draw at all, carefully remove fittings and soak entire foamer body in descaling acid. |
| <b>9. Nozzle size too small</b><br>◦ Replace with correct size nozzle.   |  |
| <b>10. Water pressure or water volume too low/inlet piping too small causing poor chemical pick up</b><br>◦ Increase water pressure or water volume. |  |
| <b>11. Soil has hardened on surface</b><br>◦ Always rinse foam before it dries<br>◦ Reapplication may be necessary.                                  |  |

**PREVENTIVE MAINTENANCE:** When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

