Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

Model # 975418 · Uni-Body Rinse / Foam Hose Drop Station

REQUIREMENTS	
Chemical Concentrate	
Water	
Temperature	up to 160°F
Pressure	35 to 125 PSI
Flow	5 GPM @ 40 PSI
Supply Line	3/4"
Compressed Air	up to 3 CFM
Hose	
Rinse	1/2" ID x 40'
Foam	3/4" ID x 40'
Nozzle	
Rinse	2550
Foam	50250

Foam 50250	
OPTIONS	
Square Jug Rack Conversion Specify Round or Square Jug Racks at time of order	
5 Gallon Pail Pail, 5 Gallon Round W/ Suction Stem	# 709105
Safe Flow Lid™ for 1 Gallon Jugs	# 109105
Lid, Suction Tube, and Strainer	# 709101
Alternate Check Valves - EPDM Standard	
01 1 1 1 01 1 1 5 5 6 7 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
Check Valve, Chemical, PP/Viton, 1/4"	# 491315





www.laffertyequipment.com 501-851-2820

WARNING! READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

OVERVIEW

The Uni-Body Rinse/Foam Hose Drop Station is a medium volume foam applicator for projecting foaming chemicals on to any surface up close or at a distance and for rinsing. This venturi injection system uses standard city water pressure (35 - 125 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution. Rich, clinging foam is created by injecting compressed air into the solution to greatly increase volume and coverage ability. The foam is then projected through the foam hose and fan nozzle at distances up to 12 feet. Rinse at full pressure through a separate hose, wand and fan nozzle.

SAFETY & OPERATIONAL PRECAUTIONS

- When connecting to a potable water supply follow all local codes for backflow prevention.
- WARNING: Severe damage to your facility, or contamination of your potable water supply, can occur
 without proper backflow prevention.
- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and safety goggles when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- For pressures over 100 PSI, remove the discharge valve or lower pressure.
- Never leave inlet ball valves on when unit is not in use.
- Follow the chemical manufacturer's safe handling instructions.
- NEVER mix chemicals without first consulting chemical manufacturer.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

- 1. Mount the unit to a suitable surface above the chemical supply to prevent siphoning.
- 2. Connect the discharge hoses as shown in the diagram and close the inlet ball valves.
- 3. Flush any new plumbing of debris.
- 4. Connect water supply.
- 5. Connect compressed air supply. If piping is older and has known contaminants, install a filter.

Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. DO NOT OVER-TIGHTEN.
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

TO OPERATE

<u>Always</u> make sure the discharge is closed or pointed in a safe direction before turning inlet valve on. Discharge can be shut off at any time during operation but <u>should not be left off for long periods of time with the inlet</u> valve on.

OPEN ONLY ONE INLET WATER BALL VALVE AT A TIME

TO FOAM

- 1. Make final metering tip adjustments based on application results.
- 2. With wand in hand open the water ball valve, and the air ball valve.
- 3. Open the discharge ball valve.
 - Wait a few seconds and observe foam consistency.
 - Use the least amount of air needed to achieve good foam quality to prevent water pressure fluctuations from affecting performance. <u>Air pressure must be kept lower than water pressure</u>.
 - To adjust the foam consistency pull out on the air regulator knob, turn slightly clockwise for dryer foam and counterclockwise for wetter foam. Wait a few seconds to see each adjustment.
 - o Medium wet foam will give the best cleaning results! Dry foam will NOT clean as well!
 - You may also have to try different sized metering tips and air settings until foam consistency and
 cleaning results are acceptable. Once this is set and desired foam consistency is achieved push lock the
 knob on the air regulator. You are ready to start application.
- 4. When foaming is completed, close the discharge ball valve, return to the unit and close the water and air ball valves. Briefly re-open the discharge ball valve to relieve pressure in the hose.
- 5. Rinse before the foam dries (if necessary).

TO RINSE

- 1. With spray wand in hand and the discharge ball valve closed open the inlet ball valve.
- 2. Open the discharge ball valve to rinse.
- 3. When complete, close the discharge ball valve then close the inlet ball valve.
- 4. Briefly re-open the discharge ball valve to relieve pressure in hose.

METERING TIP SELECTION			
METERING TIP COLOR	OZ/MIN	DILUTION RATIO @ 40 PSI	
		RINSE	FOAM
Brown	0.56	_	306:1
Clear	0.88	1	195:1
Bright Purple	1.38	_	124:1
White	2.15	_	80:1
Pink	2.93	_	59:1
Corn Yellow	3.84	_	45:1
Dark Green	4.88	_	35:1
Orange	5.77	_	30:1
Gray	6.01	_	29:1
Light Green	7.01	_	24:1
Med. Green	8.06	_	21:1
Clear Pink	9.43	_	18:1
Yellow Green	11.50	_	15:1
Burgundy	11.93	_	14:1
Pale Pink	13.87	_	12:1
Light Blue	15.14	_	11:1
Dark Purple	17.88	_	10:1
Navy Blue	25.36	_	7:1
Clear Aqua	28.60	_	_
Black	50.00	_	_
No Tip Ratio Up To:		_	6:1


The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

FORMULA

GPM × 128 ÷ Desired Dilution Ratio = oz/min

- See Unit Flow Rates chart for GPM
- Use 20 for 20:1 dilution ratio, 30 for 30:1, etc.
- Match calculated ounces per minute (oz/min) to nearest oz/min in Metering Tip Selection chart.

UNIT FLOW RATES			
PSI	GPM		
PSI	RINSE	FOAM	
35	4.68	1.25	
40	5.00	1.34	
50	5.59	1.50	
60	6.12	1.64	
70	6.61	1.77	
80	7.07	1.90	
90	7.50	2.01	
100	7.91	2.12	
110	8.29	2.22	
120	8.66	2.32	
125	8.84	2.37	
<u> </u>			

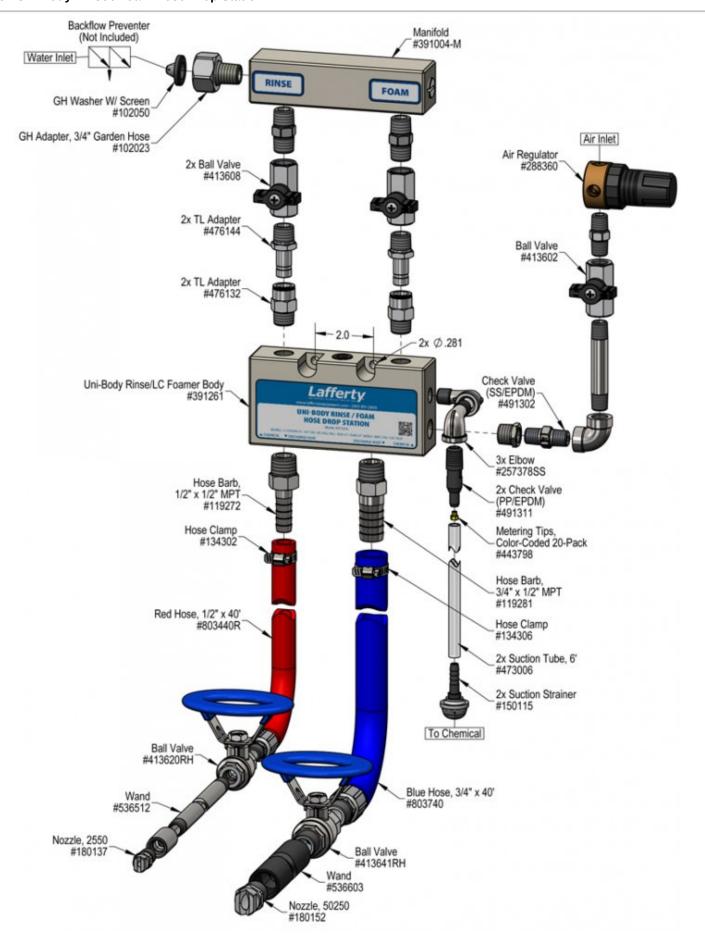

- Page 3 -

Troubleshooting Guide

Problem	Possil	Possible Cause / Solution	
Problem	Startup	Maintenance	
A) Foam surges and/or hose "bucks".	1, 2, 3, 4, 6, 7, 8, 9, 10	12, 13, 14, 15, 16, 18, 19	
B) Foamer will not draw chemical.	1, 3, 4, 7, 8, 9	12, 13, 14, 15, 16, 18, 19	
C) Foam too wet.	2, 3, 4, 6, 7, 8, 9, 10	13, 14, 15, 16, 18, 19	
D) Foam does not clean properly (too dry).	1, 4, 6, 11		
E) Using too much chemical.	5		
F) Water/chemical backing up into air line.		17	
G) Water backing up into chemical container.		18	
H) Air/chemical solution backing up into water line.		20	

11) All folicifical solution backing up into water line.	20			
Possible Cause / Solution				
Startup	Maintenance			
1. Air pressure too highAdjust the air regulator slowly counterclockwise until output stabilizes.	12. Foamer inlet orifice clogged ∘ Check/clean inlet orifice for obstructions. DO NOT DRILL OUT. Install a water filter.			
2. Water pressure or water volume too low/inlet piping too small causing poor chemical pick up o Increase water pressure or water volume (SEE REQUIREMENTS).	 13. Chemical strainer or metering tip partially blocked Clean or replace chemical strainer and/or metering tip. 14. Chemical tube stretched out or pin hole/cut in chemical tube sucking air. 			
 3. Inlet, discharge ball valve not completely open, or chemical ball valve not open (2 & 3-Way) Completely open the inlet, discharge, and chemical ball valves. 	Cut off end of tube or replace tube. 15. Vacuum leak in chemical pick-up connections Tighten the connection.			
4. Not enough chemical - metering tip too smallo Install larger metering tip.	16. Air regulator failed allowing too much air or not enough air ○ Clean or replace.			
5. No metering tip installed or metering tip too large∘ Install smaller metering tip.	17. Air check valve failed - Discharge ball valve left closed with inlet ball valves open ○ Clean or replace.			
6. Improper chemical	18. Chemical check valve stuck or failed ∘ Clean or replace.			
 7. Chemical tube not immersed in chemical or depleted Immerse tube or replenish. 8. Discharge hose too long or wrong size or kinked Straighten the hose or replace hose with correct size and length. 	19. Hard water scale or chemical build-up may have formed in the foamer body causing poor or no chemical pick-up • Follow Preventive Maintenance instructions below, using hot water or descaling acid. When there is no draw at all, carefully remove fittings and soak entire body in descaling acid.			
 If the hose must be longer than the listed Requirement, water pressure must be 65 PSI or more for up to a 75' hose. 	20. No backflow preventer installed and/or inlet ball valve left on when not in use • Install appropriate backflow preventer into water line.			
9. Nozzle size too smallReplace nozzle with correct size.				
10. Use of an oiler in the airline will cause poor foam quality ∘ Use only clean, dry air.				
Soil has hardened on surface, rinse foam before it driesReapplication may be necessary.				

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

