Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

Model # 918101 · TGSS Foamer

| REQUIREMENTS | |
|----------------------|-------------------|
| Chemical Concentrate | |
| Water | |
| Temperature | up to 180°F |
| Pressure | 400 to 1000 PSI |
| Flow | 0.9 GPM @ 700 PSI |
| Supply Line | 1/2" |
| Compressed Air | up to 3 CFM |
| Hose | 3/8" ID x 50' |
| Nozzle | 40100 |

| OPTIONS | |
|--|------------|
| Stainless Steel Hose Racks | |
| Large Stainless Steel Hose Rack | # 224150 |
| Stainless Steel Jug Racks | |
| Jug Rack, SS, 1 Gallon, Round/Square | # 224200 |
| Jug Rack, SS, 2 1/2 Gallon | # 224210 |
| Jug Rack, SS, 5 Gallon, Round/Square | # 224215 |
| Safe Flow Lid™ for 1 Gallon Jugs | |
| Lid, Suction Tube, and Strainer | # 709101 |
| Alternate Check Valves - EPDM Standard | |
| Check Valve, Chemical, SS, Viton, 1/4" | # 491324-V |
| Check Valve, Air, SS, 1/4" MM (Viton / Hast) | # 491306 |





www.laffertyequipment.com 501-851-2820

WARNING! READ ALL
INSTRUCTIONS BEFORE
USING EQUIPMENT!

OVERVIEW

The TGSS Foamer is a trigger gun foam applicator for projecting foaming chemicals on to any surface up close or at a distance. This stainless steel venturi injection system uses high water pressure (400 - 1000 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution. Rich, clinging foam is created by injecting compressed air into the solution to greatly increase volume and coverage ability. The foam is then projected through the discharge hose, trigger gun, and fan nozzle at distances up to 10 feet.

SAFETY & OPERATIONAL PRECAUTIONS

- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and eye wear when working with chemicals.
- · Always direct the discharge away from people and electrical devices.
- Follow the chemical manufacturer's safe handling instructions.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

- 1. Mount the unit to a suitable surface above the chemical supply to prevent siphoning.
- 2. Connect the discharge hose.
- 3. When connecting to a potable water supply follow all local codes for backflow prevention.
- 4. Connect water supply. To prevent blocking the small water jets in the foamer body, flush any new plumbing of debris before connecting. If water piping is older and has known contaminants, install a filter.
- 5. Connect air supply. If air line is older and has known contaminants install a filter.

Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. DO NOT OVER-TIGHTEN
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

TO OPERATE

<u>Always</u> make sure the discharge is pointed in a safe direction before turning inlet valve on. Trigger can be released at any time during operation but <u>should not be left unattended for long periods of time</u> without closing inlet hall valve

- 1. Make final metering tip adjustments based on application results.
- 2. With gun in hand open the water ball valve, and the air ball valve.
- 3. Pull the trigger on the gun
 - \circ Wait a few seconds and observe foam consistency.
 - Use the least amount of air needed to achieve good foam quality to prevent water pressure fluctuations from affecting performance. Air pressure must be kept lower than water pressure.
 - To adjust the foam consistency pull out on the air regulator knob, turn slightly clockwise for dryer foam and counterclockwise for wetter foam. Wait a few seconds to see each adjustment.
 - \circ Medium wet foam will give the best cleaning results! Dry foam will NOT clean as well!
 - You may also have to try different sized metering tips and air settings until foam consistency and cleaning results are acceptable. Once this is set and desired foam consistency is achieved push lock the knob. you are ready to start application.
- 4. When foaming is completed, release the trigger, return to the unit and close the water and air ball valves. Pull the trigger to relieve pressure in the hose.
- 5. Rinse before the foam dries.

| METERING TIP SELECTION | | | | |
|------------------------|--------|--------------------------------|--|--|
| METERING TIP COLOR | OZ/MIN | DILUTION RATIO @ 700 PSI | | |
| Brown | 0.56 | 203:1 | | |
| Clear | 0.88 | 129:1 | | |
| Bright Purple | 1.38 | 82:1 | | |
| White | 2.15 | 53:1 | | |
| Pink | 2.93 | 39:1 | | |
| Corn Yellow | 3.84 | 30:1 | | |
| Dark Green | 4.88 | 23:1 | | |
| Orange | 5.77 | 20:1 | | |
| Gray | 6.01 | 19:1 | | |
| Light Green | 7.01 | 16:1 | | |
| Med. Green | 8.06 | 14:1 | | |
| Clear Pink | 9.43 | 12:1 | | |
| Yellow Green | 11.50 | 10:1 | | |
| Burgundy | 11.93 | 10:1 | | |
| Pale Pink | 13.87 | 8:1 | | |
| Light Blue | 15.14 | 7:1 | | |
| Dark Purple | 17.88 | 6:1 | | |
| Navy Blue | 25.36 | 4:1 | | |
| Clear Aqua | 28.60 | 4:1 | | |
| Black | 50.00 | _ | | |
| No Tip Ratio Up To: | | 3.7:1 | | |
| | | | | |


The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

FORMULA

GPM × 128 ÷ Desired Dilution Ratio = oz/min

- See Unit Flow Rates chart for GPM
- Use 20 for 20:1 dilution ratio, 30 for 30:1, etc.
- Match calculated ounces per minute (oz/min) to nearest oz/min in Metering Tip Selection chart.

| UNIT FLOW RATES | | |
|-----------------|------|--|
| PSI | GPM | |
| 400 | 0.67 | |
| 500 | 0.75 | |
| 600 | 0.82 | |
| 700 | 0.89 | |
| 800 | 0.95 | |
| 900 | 1.01 | |
| 1000 | 1.06 | |

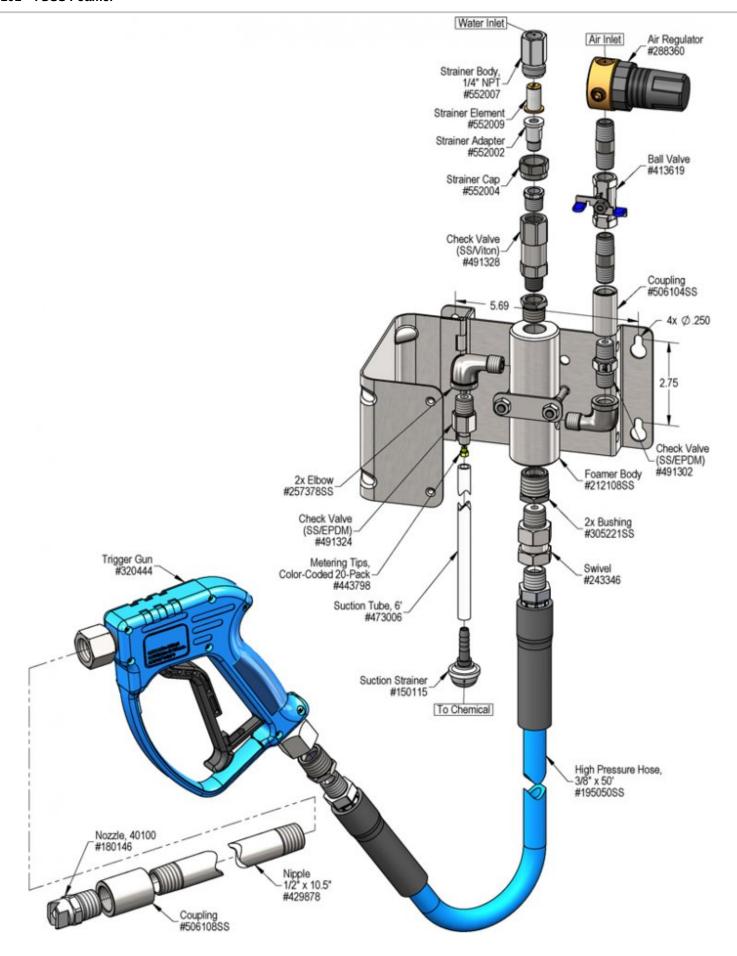

- Page 3 -

Troubleshooting Guide

| Problem | Possi | Possible Cause / Solution | |
|--|----------------------------|----------------------------|--|
| | Startup | Maintenance | |
| A) Foam surges and/or hose "bucks". | 1, 2, 3, 4, 6, 7, 8, 9, 10 | 12, 13, 14, 15, 16, 18, 19 | |
| B) Foamer will not draw chemical. | 1, 3, 4, 7, 8, 9, 10 | 12, 13, 14, 15, 16, 18, 19 | |
| C) Foam too wet. | 2, 3, 4, 6, 7, 8, 9, 10 | 13, 14, 15, 16, 18, 19 | |
| D) Foam does not clean properly (too dry). | 1, 4, 6, 11 | | |
| E) Using too much chemical. | 5 | | |
| F) Water/chemical backing up into air line. | | 17 | |
| G) Water backing up into chemical container. | | 18 | |
| H) Air/chemical solution backing up into water line. | | 20 | |

| Possible Cause / Solution | | | | |
|--|---|--|--|--|
| Startup | Maintenance | | | |
| Air pressure too high Adjust the air regulator slowly counterclockwise until output stabilizes. | 12. Foamer inlet orifice clogged ○ Check/clean inlet orifice for obstructions. DO NOT DRILL OUT. Install a water filter. | | | |
| Water pressure or water volume too low/inlet piping too small causing poor chemical pick up Increase water pressure or water volume (SEE REQUIREMENTS). | 13. Chemical strainer or metering tip partially blocked • Clean or replace chemical strainer and/or metering tip. 14. Chemical tube stretched out or pin hole/cut in chemical tube sucking air. | | | |
| Inlet or chemical (2 & 3-Way) ball valve not completely open, | ∘ Cut off end of tube or replace tube. | | | |
| Completely open the inlet, discharge, and chemical valves. | 15. Vacuum leak in chemical pick-up connections ∘ Tighten the connection. | | | |
| 4. Not enough chemical - metering tip too smallo Install larger metering tip. | 16. Air regulator failed allowing too much air or not enough air ∘ Clean or replace. | | | |
| 5. No metering tip installed or metering tip too largeo Install smaller metering tip. | 17. Air check valve failed ∘ Clean or replace. | | | |
| Improper chemical | 18. Chemical check valve stuck or failed ○ Clean or replace. 19. Hard water scale or chemical build-up may have formed in | | | |
| 7. Chemical tube not immersed in chemical or depletedo Immerse tube or replenish. | the foamer body causing poor or no chemical pick-up • Follow Preventive Maintenance instructions below, using hot water or descaling acid. When there is no | | | |
| 8. Discharge hose too long or wrong size or kinked Straighten the hose or replace hose with correct size and length. | draw at all, carefully remove fittings and soak entire body in descaling acid. | | | |
| 9. Nozzle size too small • Replace nozzle with correct size. | 20. No backflow preventer installed and/or inlet ball valve left on when not in use • Install appropriate backflow preventer into water line. | | | |
| 10. Use of an oiler in the airline will cause poor foam quality○ Use only clean, dry air. | | | | |
| Soil has hardened on surface, rinse foam before it driesReapplication may be necessary. | | | | |

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

