

Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

Model # 977941 · Magnetic AP-MM Asphalt Release Foam System

REQUIREMENTS

Chemical Concentrate
Static Tank of Water

Compressed Air up to 10 CFM

Minimum Air Supply Line 3/8"

Hose 3/4" ID x 40'

Nozzle #180193SS

Electric 120V

OPTIONS

Heater Assembly

Retro-Fit Heater Assembly # 720981

Drum & Tote Stick Lengths & Seal Materials

Drum Stick, 33" (Viton or EPDM) # 491643 / 491643-E


Drum Stick, 48" (Viton or EPDM) # 491648 / 491648-E

Drum Stick, 54" (Viton or EPDM) # 491645 / 491645-E

Tote Stick, 33" (Viton or EPDM) # 491653 / 491653-E

Tote Stick, 48" (Viton or EPDM) # 491654 / 491654-E

Tote Stick, 54" (Viton or EPDM) # 491656 / 491656-E

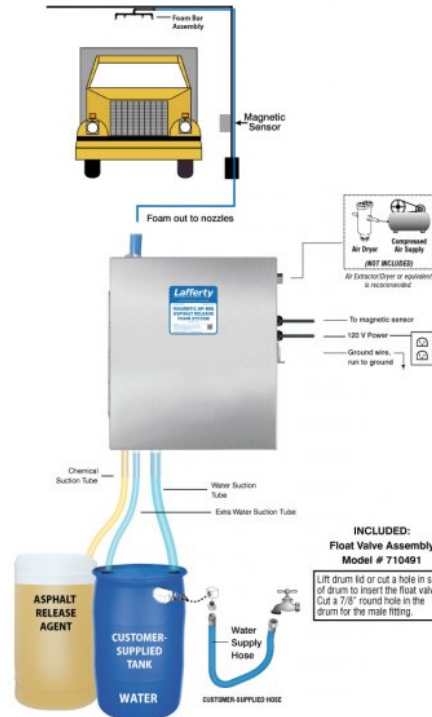

Lafferty
EQUIPMENT MANUFACTURING LLC
CFS TECHNOLOGIES

www.laffertyequipment.com

501-851-2820

**WARNING! READ ALL
INSTRUCTIONS BEFORE
USING EQUIPMENT!**

OVERVIEW

The Magnetic AP-MM Asphalt Release Foam System is a magnetic sensor activated foam applicator that mounts to a user-supplied drive-through arch for applying asphalt release chemicals to truck beds. It is designed for facilities with low or fluctuating water pressure. This system uses compressed air to drive a rugged Sandpiper air-operated, double-diaphragm pump which draws chemical concentrate and water from separate static tanks and blends them "on-the-fly" to create an accurately diluted solution. Rich, clinging foam is created by injecting compressed air into the solution to greatly expand volume and coverage ability. When a truck comes into range of the magnetic sensor, a delay timer allows the driver to position the truck under the foam bar before foaming begins and a run timer applies chemical for a pre-set time or until the vehicle leaves the foaming area, whichever is first.

SAFETY & OPERATIONAL PRECAUTIONS

- See Additional Safety Precautions included with the Electrical Control Box Installation Information
- Always consider electrical shock hazard when working with and handling electrical equipment. If uncertain, consult an Electrician. Electrical wiring should only be done by a qualified Electrician, per Local and State Electrical Codes.
- For proper performance do NOT modify, substitute nozzle, hose diameter or length
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and eye-wear when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- Follow the chemical manufacturer's safe handling instructions.
- DO NOT use d-Limonene or other chemicals that are not compatible with the Santoprene diaphragms.
- TEFLON upgrade is available.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

1. Mount the unit to a solid, secure surface within 15' of the drive lane. Mount above chemical and water containers.
 2. Do NOT connect to electricity yet.
 3. Construct a mounting pole/arch, then mount the foam bar assembly as shown in the illustration on page 1. To prevent dripping after each cycle leave a loop in the hose to make the foam bar assembly higher than the bottom of the loop.
 4. Mount Magnetic Sensor and perform set-up procedure. **See separate Insert "Installation and Set-up Instructions for Magnetic Sensor"**
 5. Install the supplied float valve assembly into your water tank as shown in the illustration on page 3. Attach your water supply hose to the float valve and turn on the water to fill the tank.
 6. Measure and cut the 1/2" suction tube into three sections of suitable length and connect them to the hose barbs as shown in the diagram on page 4. One is for chemical concentrate the other two are for water. (The one with the knob is for additional water, if needed)
 7. Secure all tubes with the clamps – do not over-tighten. Immerse ALL suction tubes into a container of water for initial testing.
 8. Connect your clean, dry compressed air supply to the system as shown in the illustration. (Air Extractor / Dryer is recommended.)
 9. Make sure the system is not plugged in to a power source. Remove control box cover. The box contains two timers (Delay & Override).
- Delay Timer:** This timer allows you to set the time to the approximate number of seconds needed from the time the truck triggers the magnetic sensor until the truck bed is positioned underneath the foam bar assembly. Set the timer by pushing the combination of dip switches that will equal the total number of seconds you need for the delay.
- Override Timer:** This timer controls the maximum amount of time the foamer will operate for. Set the timer by pushing the combination of dip switches that equal the total number of seconds you need the system to foam. Note: if the truck exits before this time has elapsed the foam will stop. (Note: Some later models contain an Override Timer with two dials. If this is the case, turn the bottom dial to zero and turn the top dial (marked Run) to the amount of time you want the foamer to operate for - 0-6 minutes)
10. Replace the control box cover.
 11. Plug the power cord into a 120 VAC power outlet. Activate your air supply.

TO TEST

1. Perform "test runs" with water only and make any necessary timer and magnetic sensor sensitivity adjustments.
2. After several successful test runs have been made you are ready to set the chemical dilution.
3. Immerse chemical suction tube into the chemical container.


IF a ready to use chemical solution is being used place all three tubes in the solution.

How to Set Your Dilution Ratio:

1. Use the chemical / water adjustment knobs to control the amounts of chemical and "extra" water that flow through the unit. The adjustment knobs allow you to achieve virtually any dilution ratio and increase the flow rate of the water IF needed. Start out with the additional water knob turned completely clockwise and add extra water if needed.
2. Turn the adjustment knobs counterclockwise to increase flow or clockwise to decrease flow.
3. The chemical knob is preset to two full turns counterclockwise this setting is for initial testing.
4. To adjust the chemical concentration.
 - For a weaker dilution, turn the chemical knob clockwise.
 - For a stronger dilution, turn the chemical knob counterclockwise.

TO OPERATE

1. The unit has been tested and is ready to operate. The pump air pressure regulator is preset and 60 PSI. This is the optimum pump pressure. The Foam Consistency regulator is preset at 50 PSI. Test "as is" before making any foam consistency adjustments.
2. Final dilution ratios and air adjustments will now have to be made.
 - To adjust foam consistency, pull out on the regulator knob and turn the the knob clockwise for dryer foam and counterclockwise for wetter foam.
 - Wait several seconds after each adjustment to see the results.
 - Too much foam consistency air will cause the hose to buck and jump and poor foam quality.
 - If foam remains too wet, slightly turn the chemical adjustment knob counterclockwise to increase chemical concentration or add air.
3. Once adjustments have been made to timers, chemical dilution and foam consistency, drive the first truck through and make any last adjustments as needed.
4. The unit is ready for operation.

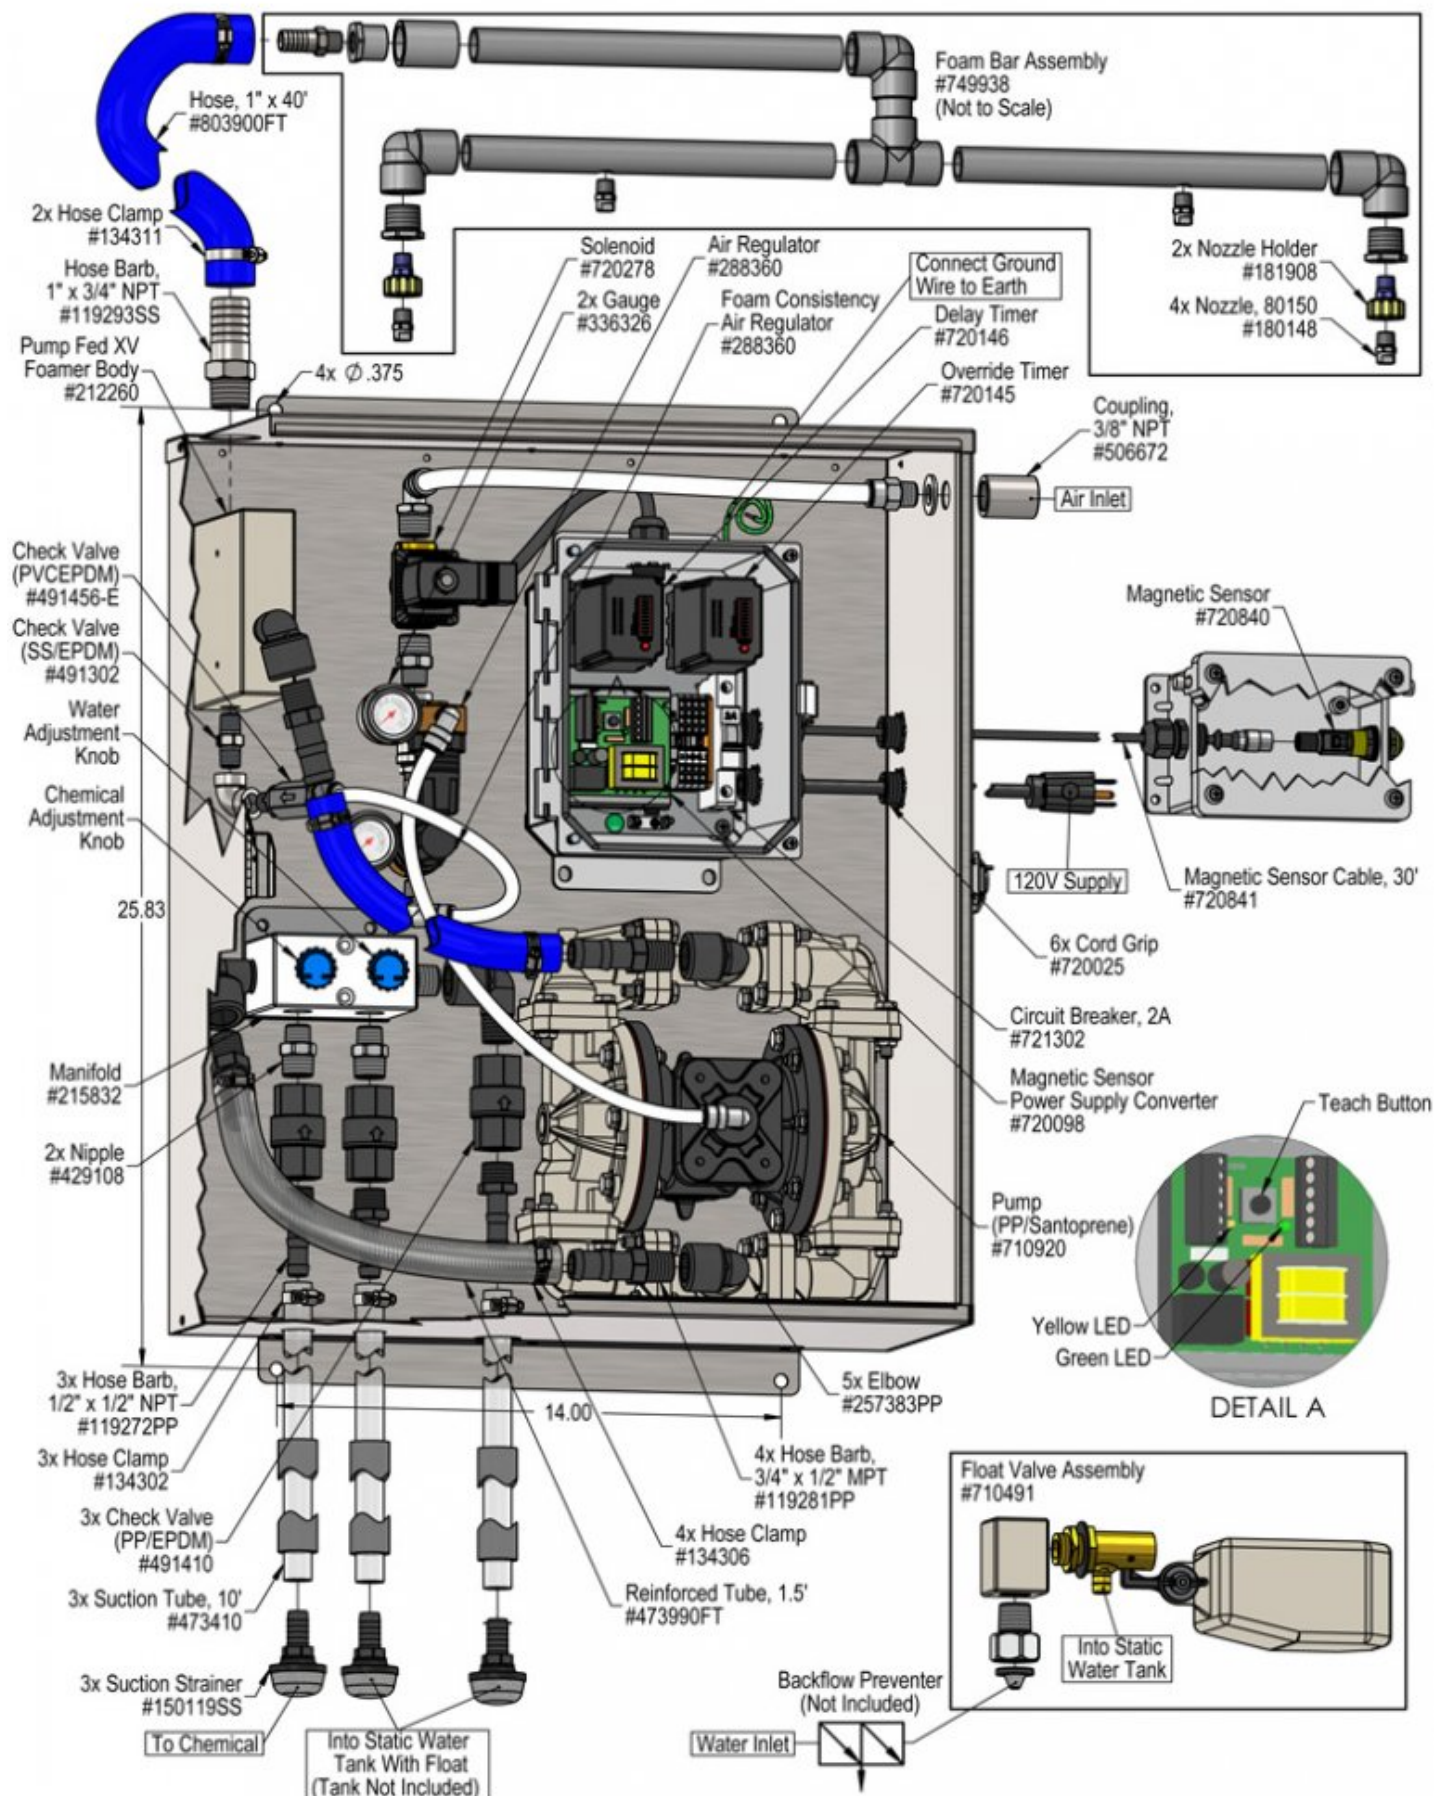

Troubleshooting Guide

Problem	Possible Cause / Solution	
	Startup	Maintenance
A) Air pump will not run/pump.	1, 2, 3, 11, 12	13, 14, 17, 18, 19, 20
B) Foam not acceptable.	2, 3, 4, 5, 6, 7, 8, 9, 10	13, 14, 15, 16, 19
C) Unit will not draw chemical.	5, 6, 7, 8, 9, 10	13, 14, 15, 16, 17, 18, 19, 20, 21
D) Water tube will not stay primed.	5, 7	15, 16, 19
E) Chemical tube will not stay primed.	7	15, 16, 19
F) Unit comes on and runs continuously.	11, 12	
G) Asphalt continues to stick to truck.	6, 8	

Possible Cause / Solution	
Startup	Maintenance
1. Problem with air pump ◦ Refer to pump manual.	13. Chemical check valve stuck or failed ◦ Clean or replace.
2. Use of an oiler in the airline will cause pump to stall ◦ Use only clean, dry air.	14. Chemical strainer blocked ◦ Clean or replace chemical strainer.
3. Inadequate air supply ◦ Adjust air regulator slowly clockwise.	15. Chemical tube stretched out where tube slides over check valve or pin hole/cut in chemical tube (sucking air in) ◦ Cut off end of tube or replace tube.
4. Water knob not adequately opened or open too much ◦ Turn water knob counterclockwise/clockwise.	16. Vacuum leak in chemical pick-up connections ◦ Tighten the connections.
5. Water tube(s) not immersed in water or water depleted ◦ Immerse tube(s) or replenish.	17. Water check valve stuck or failed ◦ Clean or replace.
6. Chemical knob not adequately opened ◦ Turn chemical knob counterclockwise.	18. Water strainers blocked ◦ Clean or replace chemical strainers.
7. Chemical tube not immersed in chemical or chemical depleted ◦ Immerse tube or replenish.	19. Water tubes stretched out where tube slides over check valve or pin hole/cut in water tubes (sucking air in) ◦ Cut off end of tube or replace tube.
8. Improper chemical ◦ Ensure product is recommended for the application.	20. Air regulator failed allowing too much air or not enough air ◦ Clean or replace.
9. Discharge hose wrong size or kinked (SEE REQUIREMENTS)	21. Air solenoid clogged or failed ◦ Clean or replace.
10. Nozzle size too small (SEE REQUIREMENTS)	
11. Timer not be set properly or malfunctioned ◦ See Timer Adjustment on page 2 or replace timer.	
12. May have electrical problems ◦ Have a qualified electrician check electrical connections. Ensure circuit breaker (5 amp) has not been tripped. ◦ Make sure magnetic sensor is functioning properly. If necessary, reset the background and sensitivity.	

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

