Lafferty Equipment Manufacturing, LLC Installation & Operation Instructions

Model # 975974 · Multi-Pet Washing System

REQUIREMENTS	
Water	
Temperature	up to 160°F
Pressure	35-125 PSI
Flow	
Low	0.4 GPM @ 40 PSI
High	1.34 GPM @ 40 PSI
Rinse	4.0 GPM @ 40 PSI
Hose	1/2" ID
Nozzle	
Low Flow Foam	Bullet Airless Foam Wand
High Flow Foam	A-25 Airless Foam Wand
Rinse	Trigger Gun
Low Flow Spray / Rinse	2510
High Flow Spray / Rinse	4040

High Flow Spray / Rinse	4040
OPTIONS	
Stainless Steel Hose Racks	
Large Stainless Steel Hose Rack	# 224150
Small Stainless Steel Hose Rack	# 224145
Stainless Steel Jug Racks	
1 Gallon Round/Square	# 224200
1 Gallon Round/Square Locking	# 224200-L
Safe Flow Lid™ for 1 Gallon Jugs	
Lid, Suction Tube, and Strainer	# 709101
For Quickly Changing Hose-End Ap	plicators
QD, NPB, Plug MGH	# 350472
QD, SS, Socket FGH	# 350474SS
Alternate Check Valve - EPDM Stan	dard
Check Valve, Chemical, PP/Viton, 1/4	# 491315





www.laffertyequipment.com 501-851-2820

WARNING! READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

OVERVIEW

The Multi-Pet Washing System is a combination system for diluting and projecting up to 4 chemicals as airless foam or spray and then rinsing. This system is ideal for bathing pets in professional grooming shops, but has countless potential applications. This venturi injection system uses standard city water pressure (35 - 125 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution. Project wet, clinging foam using the airless foam wands or use the fan nozzles to project a chemical spray with just the right amount of pressure. Select low or high flow settings for small or large jobs.

SAFETY & OPERATIONAL PRECAUTIONS

- When connecting to a potable water supply follow all local codes for backflow prevention.
- WARNING: Severe damage to your facility, or contamination of your potable water supply, can occur
 without proper backflow prevention.
- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and safety goggles when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- For pressures over 100 PSI, remove the discharge valve or lower pressure.
- Never leave inlet ball valves on when unit is not in use.
- Follow the chemical manufacturer's safe handling instructions.
- NEVER mix chemicals without first consulting chemical manufacturer.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

If you are connecting to a potable water supply follow all local codes for backflow prevention.

- 1. Mount the unit to a suitable surface above the chemical containers to prevent siphoning.
- One 10' hook up hose is provided. Measure from the inlet hose barb to the hose spigot using the female end of the hose. Cut to the appropriate length and connect the hose to the barb and secure it with the clamp as shown in the diagram. Connect the opposite end to your hose spigot.
- 3. The 50' hose can also be cut to length if it is too long for the job(s).
- When pet grooming if possible route the discharge hose underneath the sink and over the front of the sink. This will make the hose more manageable.

Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. DO NOT OVER-TIGHTEN.
- Push the chemical tube over the check valve barb and place the suction tube in the chemical concentrate.
- If necessary, cut suction tube(s) to length before attaching suction strainer.

TO OPERATE

- 2-tubing Wye's are provided to join one low flow and one high flow together into a single tube if only 2 chemicals will be used. (See drawing)
- The left inlet valve is the low volume foam side and works with the low flow airless foam wand.
- The middle inlet valve is for rinsing.
- The right inlet valve is the higher volume foam side and works with the high flow airless foam wand.

<u>Always</u> make sure the discharge hose is in your hand and pointed in a safe direction before turning any of the water inlet valves on. Discharge can be shut off at any time during operation but <u>should not be left off for long periods of time with</u> water valve on

Open only one water and one chemical ball valve at a time, unless you want a blend of two chemicals.

TO FOAM

- 1. Securely connect the airless foam wand you want to use to the gun.
- Completely open the appropriate inlet ball valve and one chemical valve to begin application. There is no right or wrong way to apply the foam, work out your own method.
- 3. Pull the trigger gun to apply foam.
- 4. Make final metering tip adjustments based on foam quality and cleaning results.

TO RINSE

- A gentle rinsing can be done through either of the airless foam wands.
- For a more powerful rinse exchange the airless foam wand with trigger gun or either of the 2 nozzles.
- ullet The water volume and $\underline{\text{rinse}}$ pressure can also be controlled by partially closing the rinse ball valve.
- 1. If rinsing with the foam wand close the chemical ball valve, open the inlet rinse ball valve.
- 2. If rinsing with the trigger gun quick, remove the foam wand and open the inlet water valve. Squeeze the trigger to begin rinsing. When finished, release the trigger and close the rinse ball valve. Squeeze the trigger to relieve pressure in the hose before trying to remove the gun.

TO SPRAY

- For non-foaming chemicals or for applying chemical with no foam. Connect the dark blue nozzle for the low flow and the light blue nozzle for the high flow to the gun.
- 2. Open the appropriate inlet ball valve and the chemical ball valve.
- 3. Pull the trigger to apply the spray.

CHEMICAL COMPATIBILITY NOTE: The check valves on this unit are EPDM, which is compatible with a wide range of shampoos, conditioners, and other detergents. Some oil based or citrus scented products may be chemically incompatible with EPDM and cause the internal components to swell and stop drawing chemical. If this occurs, please contact us to discuss alternate check valve materials.

- Page 2 -

METERING TIP SELECTION				
METERING TIP COLOR	OZ/MIN	DILUTION RATIO @ 40 PSI		
		LOW FLOW	HIGH FLOW	
Brown	0.56	91:1	306:1	
Clear	0.88	58:1	195:1	
Bright Purple	1.38	37:1	124:1	
White	2.15	24:1	80:1	
Pink	2.93	17:1	59:1	
Corn Yellow	3.84	13:1	45:1	
Dark Green	4.88	10:1	35:1	
Orange	5.77	9:1	30:1	
Gray	6.01	9:1	29:1	
Light Green	7.01	_	24:1	
Med. Green	8.06	_	21:1	
Clear Pink	9.43	_	18:1	
Yellow Green	11.50	_	15:1	
Burgundy	11.93	_	14:1	
Pale Pink	13.87	_	12:1	
Light Blue	15.14		11:1	
Dark Purple	17.88		10:1	
Navy Blue	25.36	_	7:1	
Clear Aqua	28.60	_	_	
Black	50.00	_	_	
No Tip Ratio Up To:		8:1	6:1	


The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

FORMULA

GPM × 128 ÷ Desired Dilution Ratio = oz/min

- See Unit Flow Rates chart for GPM
- Use 20 for 20:1 dilution ratio, 30 for 30:1, etc.
- Match calculated ounces per minute (oz/min) to nearest oz/min in Metering Tip Selection chart.

UNIT FLOW RATES			
PSI	GPM		
PSI	LOW FLOW	HIGH FLOW	
40	0.40	1.34	
50	0.45	1.50	
60	0.49	1.64	
70	0.53	1.77	
80	0.57	1.90	
90	0.60	2.01	
100	0.63	2.12	
110	0.66	2.22	
120	0.69	2.32	
125	0.71	2.37	

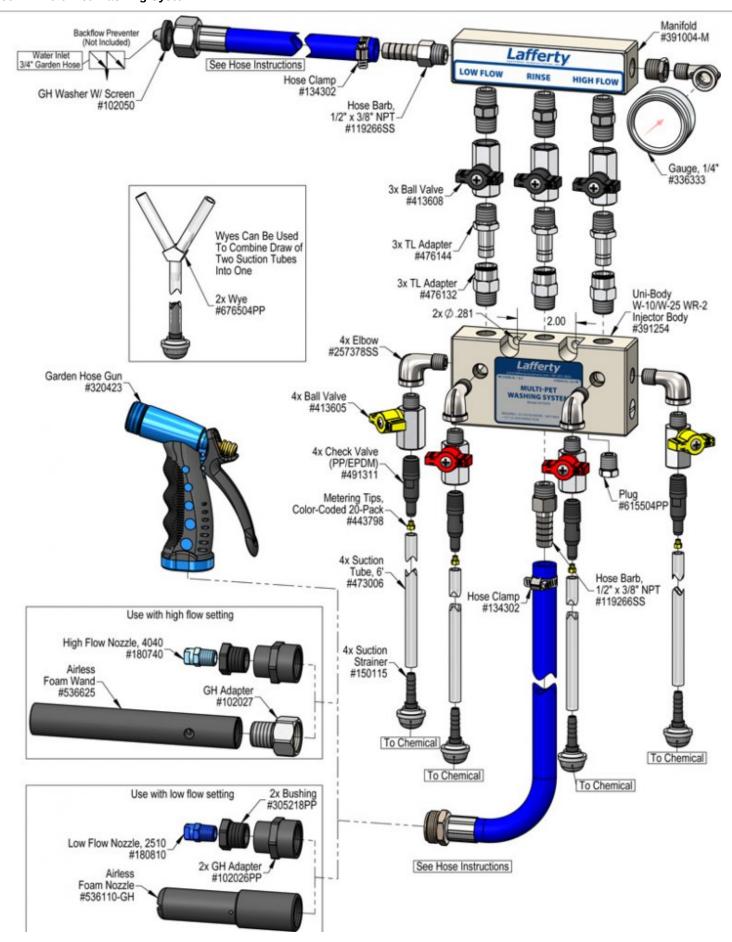

- Page 3 -

April 25th 2024

Troubleshooting Guide

Problem	Ро	Possible Cause / Solution	
	Startup	Maintenance	
A) Will not draw product	1, 5, 6, 7, 8, 10	11, 12, 13, 14, 15, 16, 17	
B) Foam/Spray does not foam or clean properly	2, 4, 5, 7, 8, 9	10, 11, 12, 13, 14, 15, 16	
C) Using too much product	3		
D) Water backing up into product container	10		

Possible Cause / Solution				
Startup	Maintenance Maintenance			
Inlet or product ball valve not completely open	10. Product check valve stuck or failed Clean or replace.			
2. Not enough product - metering tip too small o Install larger metering tip.	11. Product strainer or metering tip partially blockedClean or replace product strainer and/or metering tip.			
3. No metering tip installed or metering tip too large • Install smaller metering tip.	12. Product tube stretched out or pin hole/cut in product tubCut off end of tube or replace tube.			
4. Improper product or tube not immersed or product depleted • Ensure product is recommended for foaming and the application • Immerse tube or replenish.	 13. Vacuum leak in product pick-up connections Tighten the connection. 14. Water strainer clogged or missing/injector inlet orifice(s) clogged 			
5. Discharge hose too long or wrong size or kinked • Straighten the hose or replace hose with correct size. 6. Wrong foam wand or nozzle	 Clean or replace strainer; In extreme cases disassemble the top manifold from the body and check/clean inlet orifice for obstructions. DO NOT DRILL OUT. 			
 Low flow requires the short foam wand or the dark blue nozzle High flow requires the longer foam wand or the light blue nozzle Water pressure or water volume too low/inlet piping too 	15. Hard water scale or product build-up may have formed in the injector body causing poor or no product pick-up Follow Preventive Maintenance instructions below, using hot water and/or de-scaling acid. When there is draw at all, carefully remove fittings and soak entire injector body in de-scaling acid. 			
small causing poor product pick up o Increase water pressure or water volume 8. Soil has hardened on surface; always rinse before product dries o Reapplication may be necessary.	 16. Foam wand clogged or scaled up / wrong nozzle Hard water scale or product build-up may have forme soak entire foam wand in de-scaling acid / see requirements. 			
∘ Reapplication may be necessary.	17. More than one inlet ball valve open or no product valve open2 & 3 Way models only			

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

- Page 4 -

